


AIRPORT DIAGRAM

AL-754 (FAA)

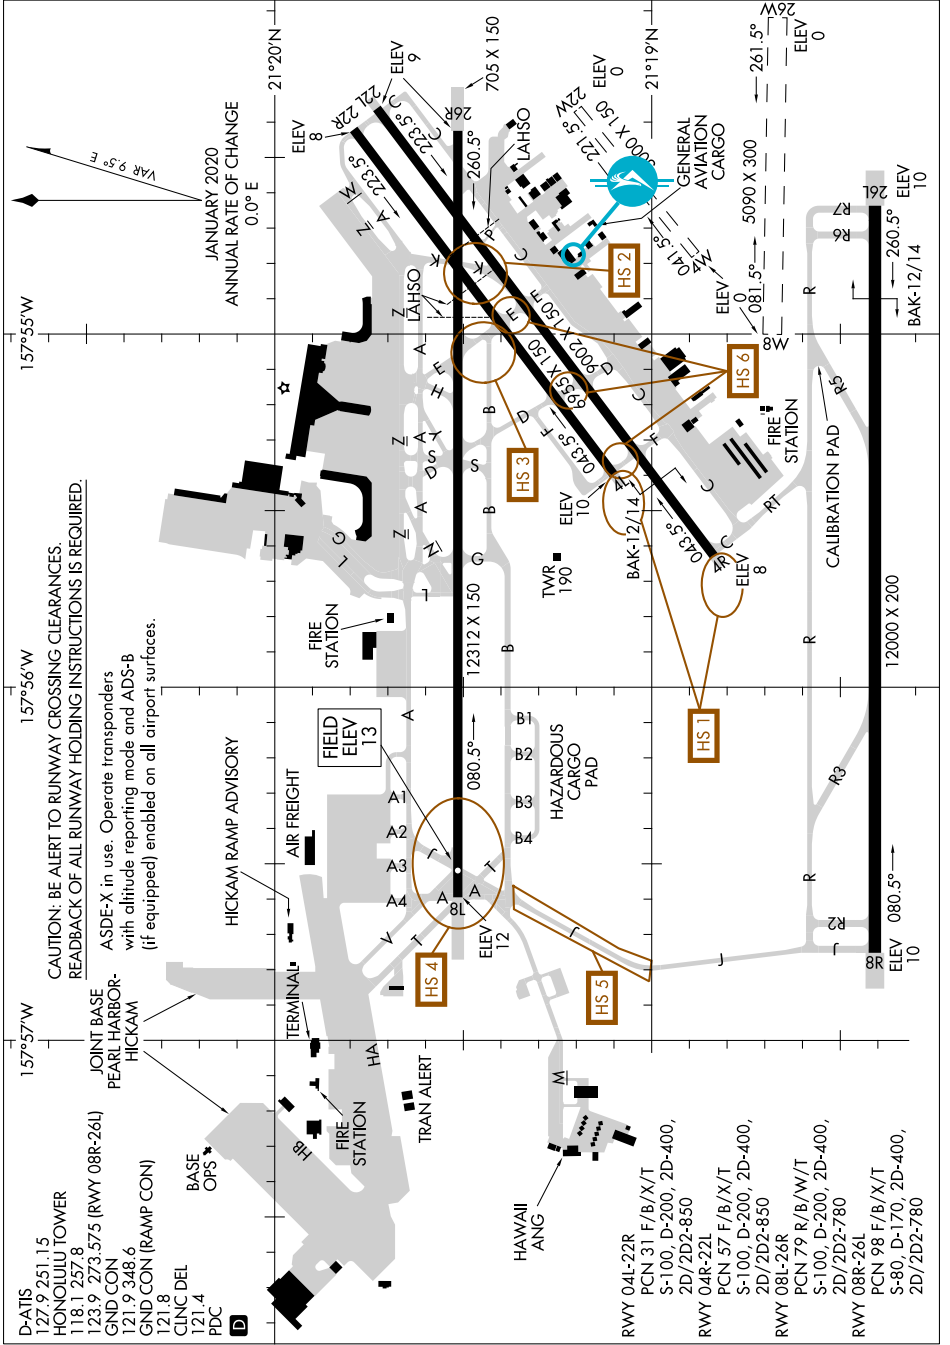

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
 READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

ASDE-X in use. Operate transponders
 with altitude reporting mode and ADS-B
 (if equipped) enabled on all airport surfaces.

JOINT BASE
 PEARL HARBOR-
 HICKAM

D-ATIS
 127.9 251.15
 HONOLULU TOWER
 118.1 257.8
 123.9 273.575 (RWY 08R-26L)
 GND CON
 121.9 348.6
 GND CON (RAMP CON)
 121.8
 CLNC DEL
 121.4
 PDC

RWY 04L-22R
 PCN 31 F/B/X/T
 S-100, D-200, 2D-400,
 2D/2D2-850
 RWY 04R-22L
 PCN 57 F/B/X/T
 S-100, D-200, 2D-400,
 2D/2D2-850
 RWY 08L-26R
 PCN 79 R/B/W/T
 S-100, D-200, 2D-400,
 2D/2D2-780
 RWY 08R-26L
 PCN 98 F/B/X/T
 S-80, D-170, 2D-400,
 2D/2D2-780